

Formwork braces

Pa-So formwork braces make low-rise forming and edge beam support easy where wooden braces are used today. Our formwork braces let you adjust the shuttering before the pour, and even during the pour should the shuttering move.

Formwork braces are fastened using ground spikes, and after use the braces are folded away and take up very little storage space.

Saving time means saving labour, something Pa-So is happy to help you with.

Looking forward to talking to you!


Pa-So Produkter AB

Krongjutaregatan 17
SE 774 35 Avesta

+ 46 226-508 24
info@pa-so.se

www.pa-so.se



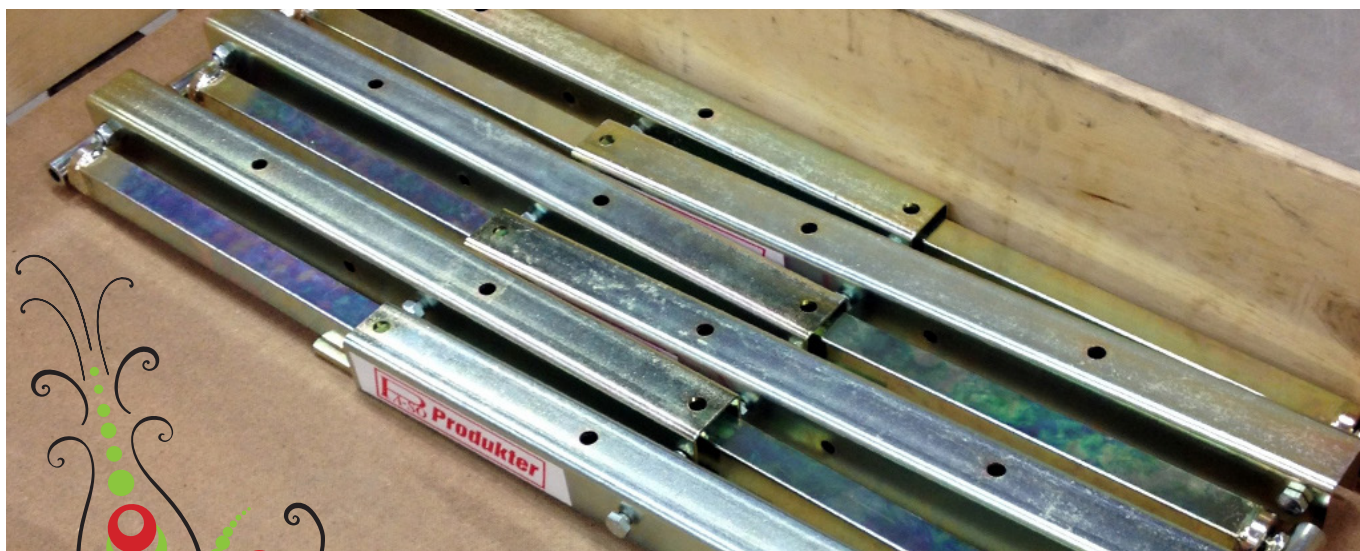

Pa-So Formwork braces, part no. 78

Height 600 mm
Width 650 mm
Weight 4.5 kg

